HD-DV Camcorder

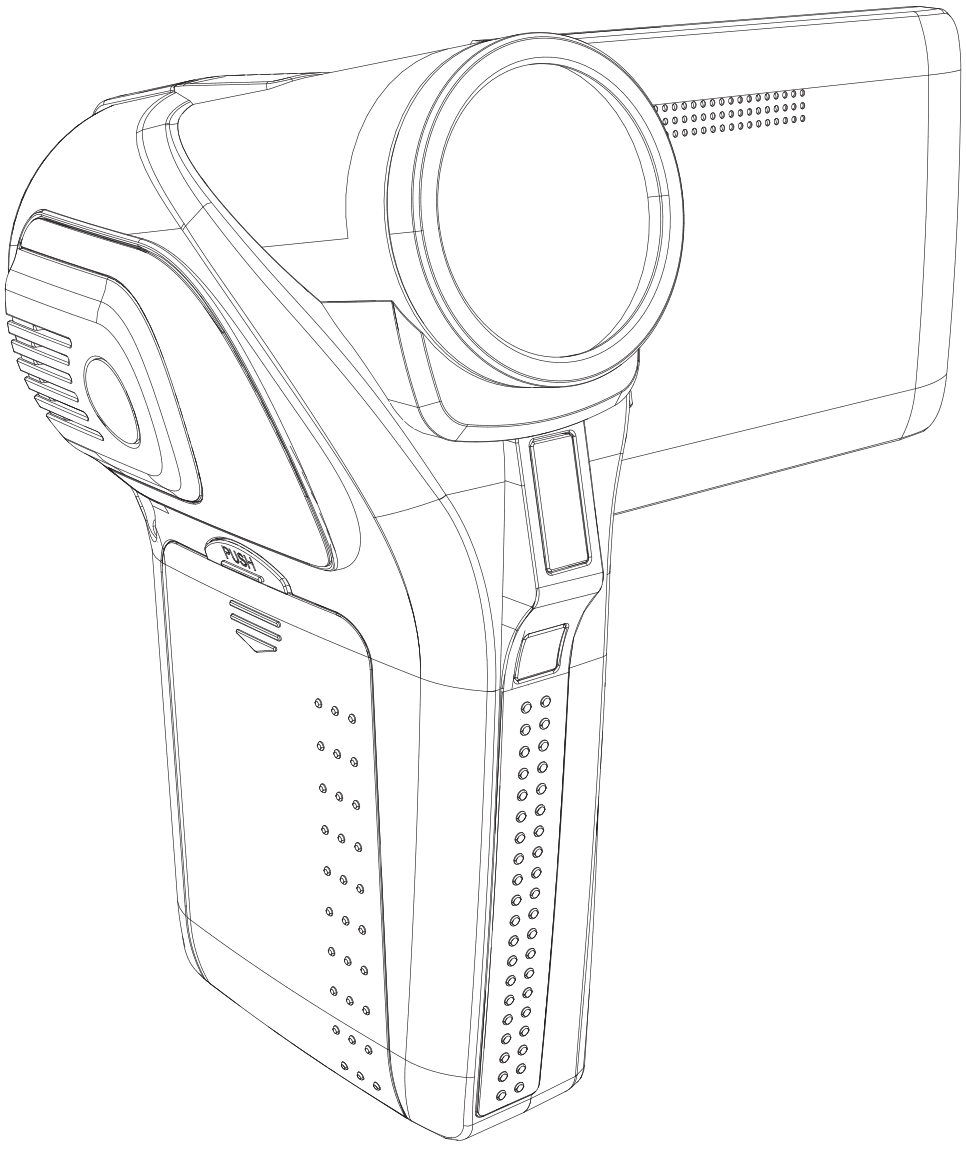

User's Manual

Welcome:

Dear user, thanks for purchasing this product.
Much investment in time and effort has gone into its development, and it is our hope that it will give you many years of trouble-free service.

Safety Notice:

1. Do not drop, puncture or disassemble the camera; otherwise the warranty will be voided.
2. Avoid all contact with water, and dry hands before using.
3. Do not expose the camera to high temperature or leave it in direct sunlight. Doing so may damage the camera.
4. Use the camera with care. Avoid pressing hard on the camera body.
5. For your own safety, avoid using the camera when there is a storm or lightning.
6. Do not use batteries of different specifications. Doing so may lead to the potential for serious damage.
7. Remove the battery during long periods between usage, as a deteriorated battery may affect the functionality of the camera.
8. Remove the battery if it shows signs of leaking or distortion.
9. Use only the accessories supplied by the manufacturer.
10. Keep the camera out of the reach of infants.
11. Risk of explosion if battery is replaced by an incorrect type.
12. Dispose of used batteries according to the instructions.

FCC Compliance Statement:

This device complies with Part 15 of the FCC Rules. Operation is subjected to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in residential installations. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television equipment reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Move the equipment away from the receiver.
-Plug the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/television technician for additional suggestions.

You are cautioned that any change or modifications to the equipment not expressly approved by the party responsible for compliance could void Your authority to operate such equipment.

If the time arises to throw away your product, please recycle all the components possible.

Batteries and rechargeable batteries are not to be disposed in your domestic waste! Please recycle them at your local recycling point.

Together we can help to protect the environment.

■ **DE:** Umweltschutz
Geben Sie das Gerät am Ende der Lebensdauer nicht in den normalen Hausmüll. Bringen Sie es zum Recycling zu einer offiziellen Sammelstelle. Auf diese Weise helfen Sie die Umwelt zu schonen.

■ **FR:** Environnement
Ne jetez pas l'appareil en fin de vie avec les ordures ménagères, mais déposez-le à un endroit prévu à cet effet par les pouvoirs publics pour son recyclage. Vous aiderez, ainsi, à protéger l'environnement.

■ **IT:** Ambiente
A fine vita non gettare questo apparecchio nella normale raccolta dei rifiuti, ma portalo presso uno dei punti di raccolta autorizzati. In questo modo contribuirai a preservare l'ambiente.

■ **ES:** Medio ambiente
Cuando vaya a deshacerse de este aparato, no lo tire con la basura normal del hogar; deposítelo en un punto de recogida oficial para su reciclado. Al hacerlo, contribuirá a preservar el medio ambiente.

■ **NL:** Milieu
Gooi het apparaat aan het einde van zijn levensduur niet weg met het normale huisvuil, maar lever het in op een officieel verzamelpunt om het te laten recyclen. Op deze wijze helpt u om het milieu te beschermen.

■ **PT:** Meio ambiente
Quando chegar a altura de se desfazer do aparelho, não o deite fora juntamente com o seu lixo doméstico normal. Deverá colocá-lo num ponto de recolha oficial para efeitos de reciclagem. Ao fazê-lo, estará a contribuir para a preservação do meio ambiente.

■ **PL:** Środowisko naturalne
Nie należy wyrzucać tego urządzenia po zakończeniu jego żywotności z normalnymi śmieciami domowymi, ale należy przekazać je do oficjalnego punktu zbiórki w celu recyklingu. Pomoże to w ochronie środowiska naturalnego.

■ **RU:** Защита окружающей Среды
По окончании срока службы не выбрасывайте прибор вместе с обычными бытовами отходами, а сдавайте в специальные пункты приема. Поступая так вы способствуете делу сохранения окружающей среды.

Sicherheitshinweise:

1. Lassen Sie die Kamera nicht fallen und beschädigen und zerlegen Sie die Kamera nicht, andernfalls erlischt die Gewährleistung.
2. Vermeiden Sie jeglichen Kontakt des Geräts mit Wasser und trocknen Sie sich die Hände ab, bevor Sie es verwenden.
3. Setzen Sie die Kamera keinen hohen Temperaturen aus und lassen Sie das Gerät nicht in direkter Sonneneinstrahlung liegen. Andernfalls könnten Schäden an der Kamera auftreten.
4. Verwenden Sie die Kamera behutsam. Vermeiden Sie es, starken Druck auf das Kameragehäuse auszuüben.
5. Verwenden Sie die Kamera zu Ihrer eigenen Sicherheit nicht bei Gewittern oder Blitzschlag.
6. Verwenden Sie keine Batterien mit anderen Spezifikationen. Andernfalls können unter Umständen schwere Schäden am Gerät entstehen.
7. Entfernen Sie die Batterie, wenn Sie das Gerät längere Zeit nicht verwenden, da mängelbehaftete Batterien die Funktionalität der Kamera beeinträchtigen können.
8. Entfernen Sie die Batterie, falls diese Anzeichen von Ausrinnen oder Verformungen aufweist.
9. Verwenden Sie ausschließlich vom Hersteller angebotenes Zubehör.
10. Bewahren Sie die Kamera außerhalb der Reichweite von Kindern auf.
11. Es besteht ein Explosionsrisiko, wenn die Batterie durch einen falschen Typ ersetzt wird.
12. Entsorgen Sie nach den Anweisungen gebrauchte Batterien.

Notice de sécurité:

1. Ne pas faire tomber, percer ou démonter la caméra ; sinon, la garantie est annulée.
2. Eviter tout contact avec l'eau, et ayez les mains sèches lorsque vous l'utilisez.
3. Ne pas exposer la caméra à de hautes températures, ne pas la laisser directement sous le soleil. Vous risquez sinon de l'endommager.
4. Utiliser la caméra avec soin. Eviter d'appuyer trop fort sur le corps de la caméra.
5. Pour votre propre sécurité, éviter d'utiliser la caméra pendant une tempête ou un orage.
6. Eviter d'utiliser des piles de différentes marques ou de différents types en même temps. Cela risque de causer des dommages importants.
7. Sortir les piles lorsque la caméra reste inutilisée pendant longtemps, car des piles qui se détériorent risquent d'empêcher le bon fonctionnement de la caméra.
8. Sortir les piles si vous constatez qu'elles fuient ou qu'elles se déforment.
9. Utiliser exclusivement les accessoires fournis par le fabricant.
10. Garder la caméra hors de portée des enfants.
11. Risque d'explosion en cas d'utilisation de batterie de type incorrect.
12. Disposez les batteries utilisées conformément aux instructions données dans le manuel.

Avviso per la sicurezza:

1. Non far cadere, forare o smontare la videocamera diversamente si annullerà la garanzia.
2. Evitare il contatto con l'acqua ed asciugarsi le mani prima dell'uso.
3. Non esporre la videocamera ad alte temperature o lasciarla alla luce diretta del sole. Diversamente si danneggia la videocamera.
4. Maneggiare la videocamera con cura. Evitare di esercitare pressioni sul corpo della videocamera.
5. Per la propria sicurezza evitare di utilizzare la videocamera durante i temporali.
6. Non usare batterie diverse da quelle specificate. Diversamente si può creare il potenziale di seri danni.
7. Rimuovere la batteria quando la videocamera non è utilizzata per periodi prolungati poiché le batterie deteriorate influiscono sulla funzionalità della videocamera.
8. Rimuovere le batterie se mostrano segni di perdita di liquido o distorsione.
9. Utilizzare solamente gli accessori forniti dal produttore.
10. Tenere la videocamera fuori della portata dei bambini.
11. Rischio di esplosione se la batteria è sostituita da un tipo errato.
12. Inserire le batterie secondo le istruzioni.

Aviso de seguridad:

1. No deje caer, perfore ni desmonte la cámara; si lo hace, la garantía quedará invalidada.
2. Evite que entre en contacto con el agua y séquese las manos antes de utilizar el producto.
3. No exponga la cámara a altas temperaturas ni la deje donde incida sobre ella la luz directa del sol. Si lo hace, la cámara puede resultar dañada.
4. Utilice la cámara con cuidado. No ejerza mucha presión en el cuerpo de la cámara.
5. Por su propia seguridad, no utilice la cámara cuando haya tormenta o rayos.
6. No utilice baterías de especificaciones diferentes. Si lo hace, la cámara podría sufrir daños irreparables.
7. Quite la batería si no va a utilizar la cámara durante un prolongado período de tiempo, ya que una batería deteriorada puede afectar a la funcionalidad de la misma.
8. Quite la batería si muestra signos de fuga o distorsión.
9. Utilice únicamente accesorios especificados por el fabricante.
10. Mantenga la cámara fuera del alcance de los niños.
11. Riesgo de explosión si la batería se sustituye por otra de un tipo incorrecto.
12. Disponga las baterías según las instrucciones.

Veiligheidsmaatregelen:

1. Laat de camera niet vallen. Doorboor en demonteer hem niet. U zou de garantie ermee ongeldig maken.
2. Vermijd contact met water en gebruik de camera alleen met droge handen.
3. Stel de camera niet bloot aan hoge temperaturen en laat hem niet in direct zonlicht liggen. U kunt er de camera mee beschadigen.
4. Gebruik de camera zorgvuldig. Druk niet hard op de behuizing.
5. Gebruik, voor uw eigen veiligheid, de camera niet tijdens een storm of onweer.
6. Gebruik geen batterijen van verschillende merken door elkaar. U kunt er ernstige schade mee veroorzaken.
7. Verwijder de batterijen als u de camera langere tijd niet gebruikt. Slechte batterijen kunnen de werking van de camera aantasten.
8. Verwijder de batterijen als ze gaan lekken en als ze vervormd zijn.
9. Gebruik alleen de toebehoren die door de fabrikant zijn aanbevolen.
10. Houd de camera buiten bereik van kinderen.
11. Risico op ontploffing als de batterij wordt vervangen door een onjuist type.
12. Verwijder lege batterijen in overeenstemming met de instructies.

Normas de Segurança:

1. Não deixe cair, não fure e não desmonte a câmara, pois caso contrário a garantia perderá a sua validade.
2. Evite todo o contacto com a água e seque as mãos antes de utilizar a câmara.
3. Não exponha a câmara a altas temperaturas e não a deixe exposta à luz solar directa. Isto pode danificar a câmara.
4. Utilize a câmara cuidadosamente. Evite exercer pressão sobre o corpo da câmara.
5. Para sua própria segurança, evite utilizar a câmara durante a ocorrência de tempestades ou relâmpagos.
6. Evite utilizar pilhas de marcas ou tipos diferentes ao mesmo tempo. Isto pode provocar danos graves.
7. Retire as pilhas quando a câmara não for utilizada por longos períodos, uma vez que as pilhas deterioradas podem afectar a funcionalidade da câmara.
8. Retire as pilhas se estas mostrarem sinais de fuga ou corrosão.
9. Utilize apenas os acessórios fornecidos pelo fabricante.
10. Mantenha a câmara fora do alcance das crianças.
11. Risco de explosão se a bateria for substituída por uma outra de tipo incorrecto.
12. Colocação das baterias de acordo com as instruções.

Uwaga dotycząca bezpieczeństwa:

1. Nie należy upuszczać, dziurawić lub rozbierać kamery, w przeciwnym razie nastąpi unieważnienie gwarancji.
2. Należy unikać kontaktu z wodą i przed użyciem należy wysuszyć ręce.
3. Nie należy narażać kamery na wysoką temperaturę lub pozostawiać ją bezpośrednio na słońcu. Może to spowodować uszkodzenie kamery.
4. Kamerę należy używać z zachowaniem ostrożności. Nie należy mocno naciskać obudowy kamery.
5. Dla własnego bezpieczeństwa należy unikać używania kamery podczas burzy lub wyładowań atmosferycznych.
6. Nie należy używać baterii o różnych specyfikacjach. Może to spowodować poważne uszkodzenie.
7. Baterię należy wyjąć przy długich okresach nieużywania, ponieważ jej uszkodzenie może uniemożliwić działanie kamery.
8. Baterię należy wyjąć, gdy wykazuje oznaki przeciekania lub odkształcenia.
9. Należy używać wyłącznie akcesoriów dostarczonych przez producenta.
10. Kamerę należy trzymać poza zasięgiem dzieci.
11. Wymiana baterii na baterię nieprawidłowego typu, grozi jej eksplozją.
12. Zużyte baterie należy usuwać zgodnie z instrukcjami.

Памятка по технике безопасности:

1. Не роняйте, не пробивайте и не разбирайте камеру, в противном случае гарантия будет аннулирована.
2. Не допускайте соприкосновения камеры с водой и сушите руки перед ее использованием.
3. Не подвергайте камеру воздействию высокой температуры или прямых солнечных лучей. Это может привести к повреждению камеры.
4. Пользуйтесь камерой осторожно. Не нажимайте с усилием на корпус камеры.
5. В целях собственной безопасности, не используйте камеру во время грозы или молний.
6. Не используйте батареи с другими характеристиками. Такие действия могут привести к серьезному повреждению камеры.
7. Извлекайте батарею, если камера не используется длительное время, так как испорченная батарея может нарушить функционирование камеры.
8. Извлекайте батарею при наличии признаков протечки или деформации.
9. Используйте только принадлежности, поставляемые производителем камеры.
10. Храните камеру в недоступном для детей месте.
11. При замене батареи на батарею неверного типа может произойти взрыв.
12. Утилизируйте использованные батареи согласно инструкции.

Table of Contents

Getting Started 1

Knowing your camcorder parts 1
Installing the battery 2
Charging the battery 2
Inserting a memory card (optional) 2
Turning on/off your camcorder 2
Setting language 3
Reading LCD indicators 3

Basic Operations 4

Recording a video clip 4
Recording a voice clip 4
Taking a still picture 5
Recording TV program 6
Playing back your recordings 7
Playing back your recordings on PC 8
Connecting the camcorder to TV 9

Advanced Operations 11

Menu operation 11
Menu items in Camera mode 11
Menu items in Playback mode 12
Menu items in Setting mode 13
Battery Life Indicator 14
Battery Life 14
Storage Capacity 15
System Requirements 15
Specifications 16

Getting Started

Knowing your camcorder parts

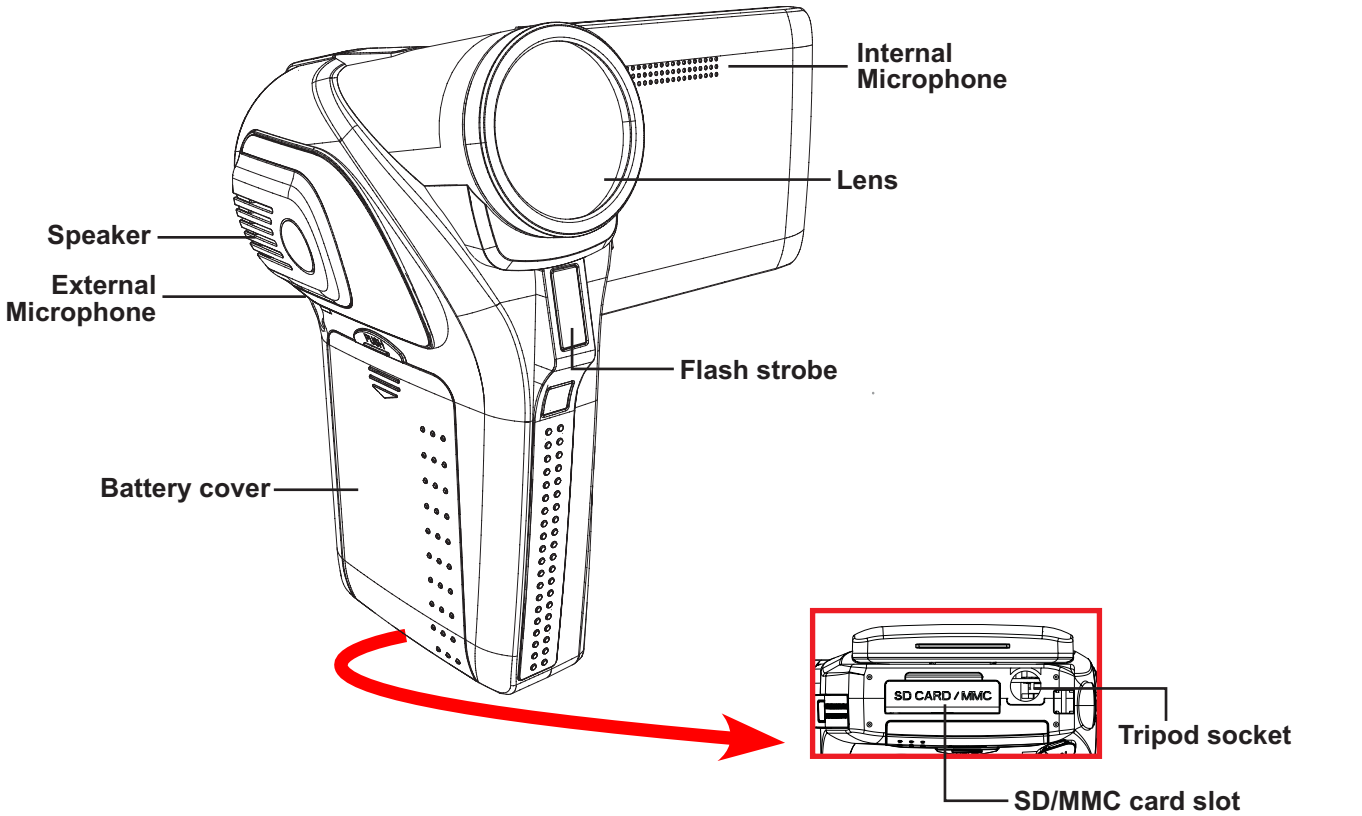

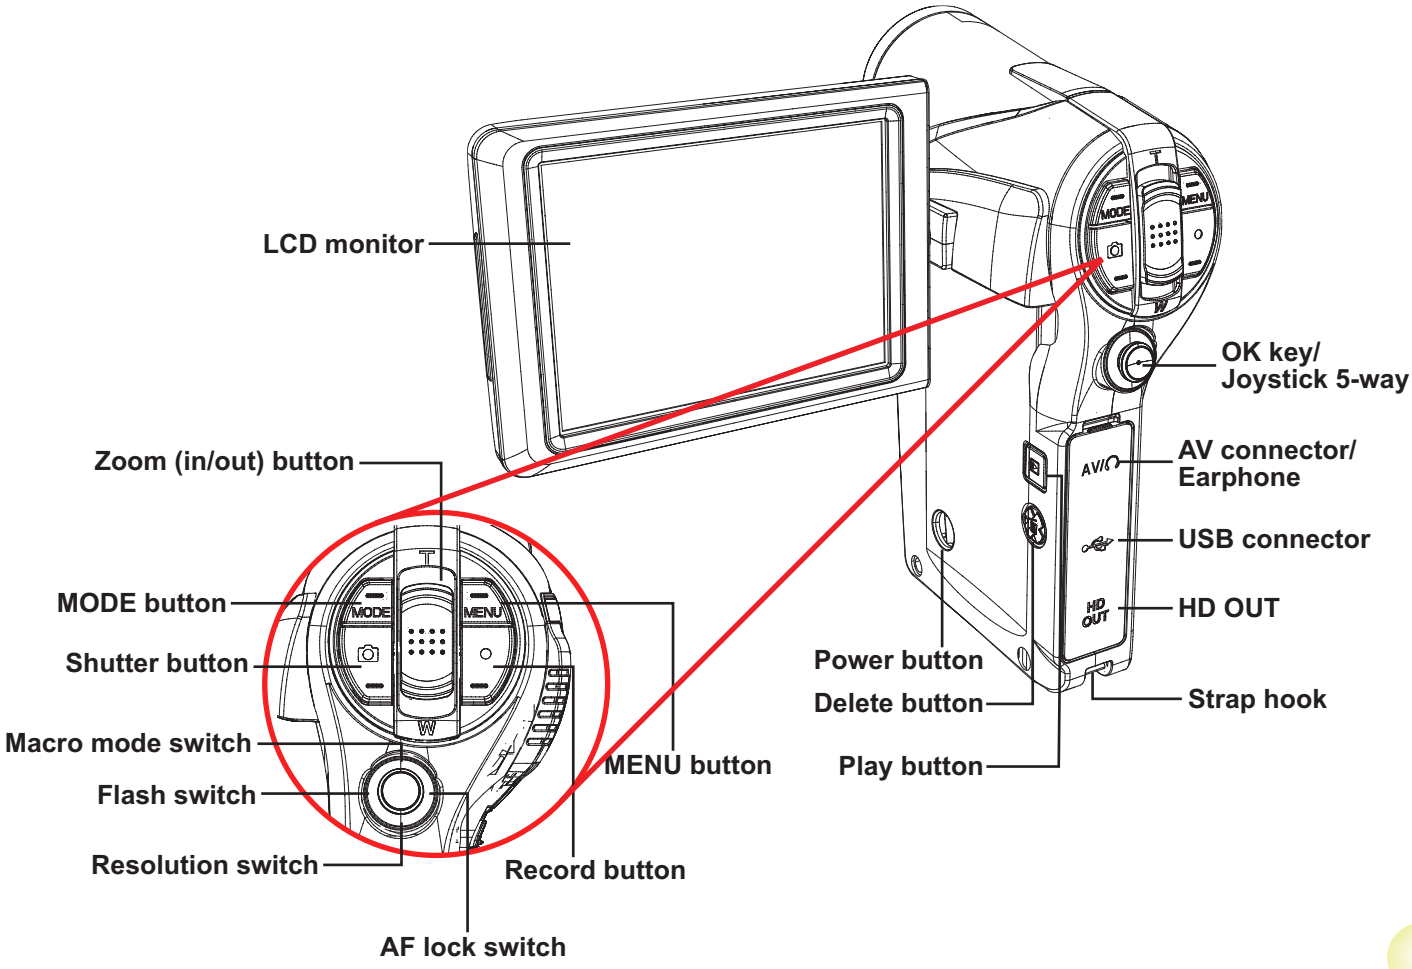

Installing the battery

1. Press the **Push** button first and slide the battery cover open.
2. Place the accessory Li-Ion battery into the compartment. Note that the metallic contacts must be aligned with the contacts in the compartment.
3. After the battery is properly installed, replace the battery cover.

Charging the battery

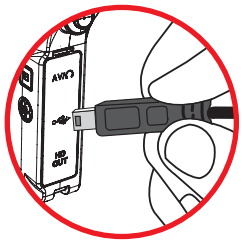

Please charge the battery at least 8 hours for first time use.

1. Connect the cable.
   Connect one end of the supplied AC adapter to the USB port of the camcorder and the other end to a wall outlet.
   OR
   Connect one end of the supplied USB cable to the USB port of the camcorder and the other end to a powered PC. Make sure the camcorder is powered off.
2. The charging LED turns red and the charge starts.
3. When the charging is interrupted or the battery pack is fully charged, the charging LED will turn green.

> ! When using a PC to charge the battery, do not power on the camcorder, or the charge will stop.

Inserting a memory card (optional)

To insert a memory card, do the followings:
(1) Open the battery cover.
(2) Gently push the card until the card reaches the bottom of the slot.

To remove the memory card, gently push the card and it will pop up. Then pull the card out of the slot.

Turning on/off your camcorder

Open the LCD monitor or press and hold down the **Power** button for 1 second to turn on the camcorder.

To turn off the camcorder, press and hold down the **Power** button for 1 ~ 3 seconds or close the LCD monitor.

> ! If the camcorder stays inactive for a long period of time, it may automatically shut down due to the Auto-Off setting.

Setting language

1. Power on the camcorder.
2. Press the **MODE** key to enter the **MODE** menu.
3. Use the **Joystick** switch to select the **Setting** mode and press **OK** to enter the menu screen.
4. Use the **Joystick** to select the **Language** item, and then Press **OK** to confirm.
5. Move the **Joystick** up/down to select a language.
6. When done, press **OK** to confirm the setting.

Reading LCD indicators

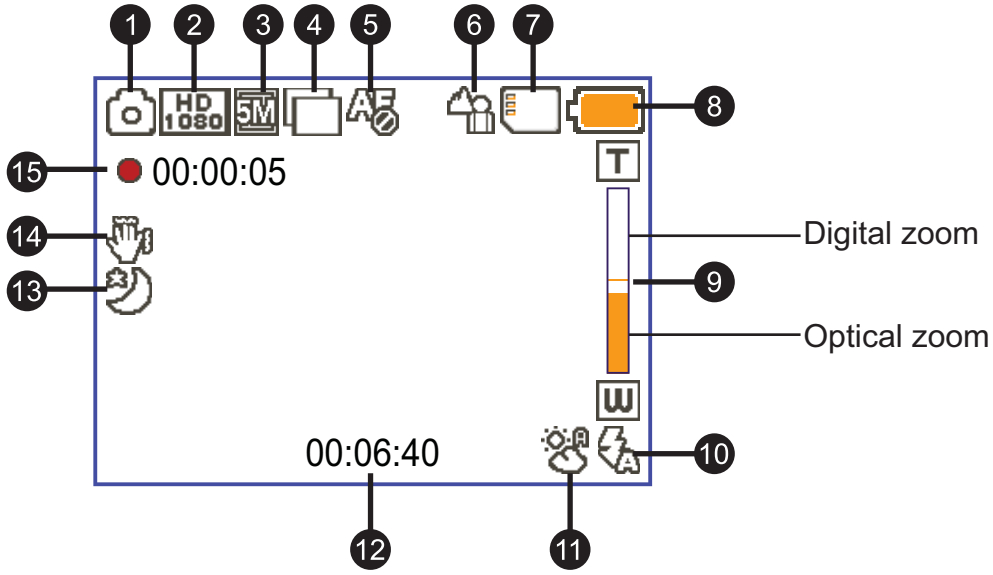

1. Mode icon
2. Video resolution
3. Picture resolution
4. Multi-shot
5. AF lock
6. Focus
7. Internal memory/SD card inserted
8. Battery life
9. Zoom ratio indicator
10. Flash
11. White balance
12. Remaining recordable time
13. NightShot
14. Stabilizer
15. Recording time

! The LCD will display 4:3 ratio while setting as QVGA video resolution. (Please refer to the page 5 for more detailed instructions.)

Basic Operations

Recording a video clip

1. Adjust the focus:
   Normally the camcorder can auto focus without adjusting focus. If you want to take close-up pictures, you can push the Up button to switch to Macro mode ( ).
2. Zooming:
   Move the **Zoom** button up or down to zoom in or zoom out the screen.
3. Press the **Record** button to start recording.
4. Press the **Record** button again to stop recording.

- The zoom function is also available during recording (except in macro mode).
- During recording, you can capture images with the vedio resolution you set by pressing the **Joystick** switch. The image you captured will appear the same resolution as the one you set for video recording except in 1080P resolution mode.
- Continuous Shot: In recording preview mode, you can capture continuous images with the vedio resolution you set by pressing the **Joystick** switch. By pressing 1 second, you can capture continuous 10 images. For 2 seconds, it will be 20 images...etc. The image you captured will appear the same resolution as the one you set for video recording except in 1080P resolution mode.
- It's normal that the camcorder will feel slightly warm with continuous use / recording due to its high performance.

Recording a voice clip

1. Power on the camcorder.
2. Press the **MODE** key to enter the **MODE** menu.
3. Use the **Joystick** switch to select the **Voice Recorder** mode and press **OK** to enter the menu screen.
4. Press the **Record** button to start recording
5. Press the **Record** button again to stop recording.

Taking a still picture

1. Adjust the focus:
   Normally the camcorder can auto focus without adjusting focus. If you want to take close-up pictures, you can push the Up button to switch to Macro mode ( ).
2. Zooming:
   Move the **Zoom** button up or down to zoom in or zoom out the screen.

> Adjust other advanced settings if necessary.

3. Press the **Shutter** button half way down and hold for the camcorder to auto focus. When the focus frame turns green, press the button fully down to take a still picture.

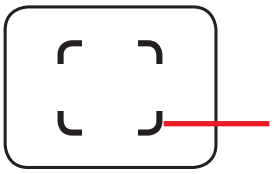

> Due to the sensor capture feature, the LCD preview and ratio of still picture capture will vary depending upon different video resolution settings.
> The image capture of the camera is set where as video resolutions are different.

Video resolution	Preview	Taking pictures and focusing
HD 1080P(1440x1080)	16:9 ratio	4:3 ratio
HD 60f(1280x720)	16:9 ratio	4:3 ratio
HD 30f(1280x720)		
WVGA 60f(848x480)		
QVGA 30f(320x240)	4:3 ratio	4:3 ratio

★ For select model only. Please refer to the package printing for detailed specification.

Recording TV program

The digital video recording technology allows you to record TV program via AV-IN cable.

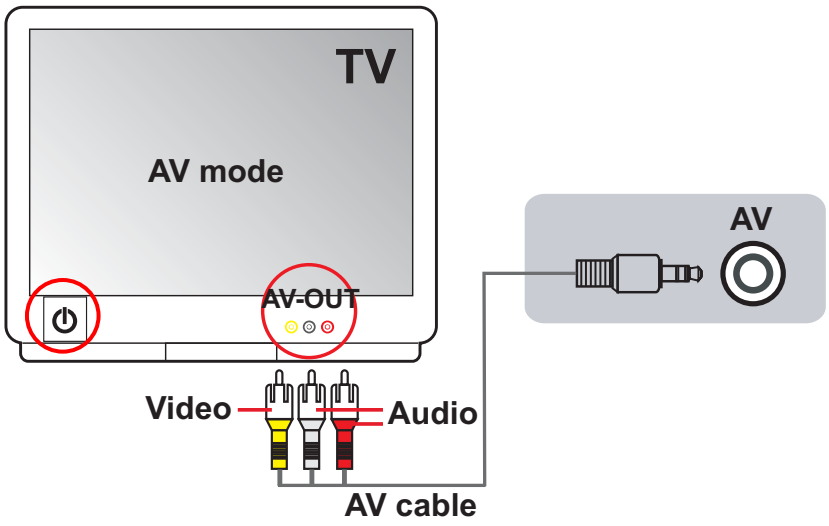

1. Turn on your TV or DVD player.
2. Connect the AV cable (yellow/white/red color) to the AV-Out jacks on the TV or DVD player. (Normally, it's not necessary to switch the mode, please refer to the User's Manual of the TV or DVD player.)
3. Power on the camcorder.
4. Connect the other end of the AV cable to the "AV" port on your camcorder. When the pop-up message appears on the screen, please select "AV-IN".
5. Make sure that the images displayed on the TV or DVD player is also displayed on the camera's LCD.
6. Press the **Record** button to start recording.
7. Press the **Record** button again to stop recording.

- Please dont' switch TV channels or turn off TV during TV program recording, or it would stop recording.
- When recording videos from TV or DVD player, the resolution is set to 480P (D1).

Playing back your recordings

1. Press the **MODE** button and use the **Joystick** to switch to "**My Works**" mode.
   Or press the **Play/Pause** button (▌▶) on the left side of the LCD monitor.

2. There are three folders below **My works: Video, Picture, and Voice**. Select Video, Picture or Voice, and then press the **OK** key to enter the index mode.

3. Operations in playback mode:

File type	How to...	Action
Index mode Full-screen mode	Shift between Index mode and Full-screen mode	In Index mode, press the **OK** key to switch to Full-screen mode. In Full-screen mode, press the **MENU** button to switch to Index mode.
	Shift between files	1. In Index mode: Use the **Joystick** to move the highlight box. 2. In Full-screen mode: Use the **Joystick** to move left or right.
Video & Audio	Start playing	When selected (in full-screen mode), the file automatically starts playing.
	Pause/Resume playing	During playing/While paused, press the **OK** key.
	Adjust the volume level	During playing, use the **Joystick** to move up or down.
	Stop playing	During playing, press the **MODE** button.
	Return to the preview screen	Press the **Shutter** button.
	Fast forward	During playing, use the **Joystick** to move right. To stop, press the **OK** key.
	Fast backward	During playing, use the **Joystick** to move left. To stop, press the **OK** key.
Picture	Zoom in/out	Use the **Joystick** to move up or down.
	Lock/Release zoom ratio	When the zoom ratio is greater than 1.0x, press the **OK** key.
	Browse the enlarged picture	When the zoom ratio is locked, use the **Joystick** to browse the picture.

Playing back your recordings on PC

Installing software

Please notice that the recorded videos are .mov format. So you need some special programs to view the recordings on PC. For first time use, please make sure you have QuickTime 7.0 (or above) player on your PC. If not, please download the QuickTime player from the website.

OR

Please install the software on the bundled CD.

Connecting PC and Save files

After the software is properly installed on your PC, please follow below procedures.

1. Turn on the camcorder.

2. Connect the camcorder (with SD card inserted) to your computer with the USB cable.

3. A dialogue window will appear automatically. Please select the item "**Open folder to view files**" and click "**OK**".

4. If the dialogue window does not appear automatically, you may double click on "My computer" and open the "Removable Drive".

5. Double-click on the **DCIM** file folder.

6. Double-click on the **100MEDIA** file folder.

7. Copy the files you wish to keep and save them to the desired location on your computer.

Connecting the camcorder to TV

Please follow the below instructions to connect your camcorder and TV via accessory AV cables for real-time display. You can display your video clips and still pictures on your TV, sharing them with your friends and family.

Connecting the camcorder to HDTV

HD TV hereby means the HDTV built-in component input ports, thus can perform HD high resolution quality while connected.

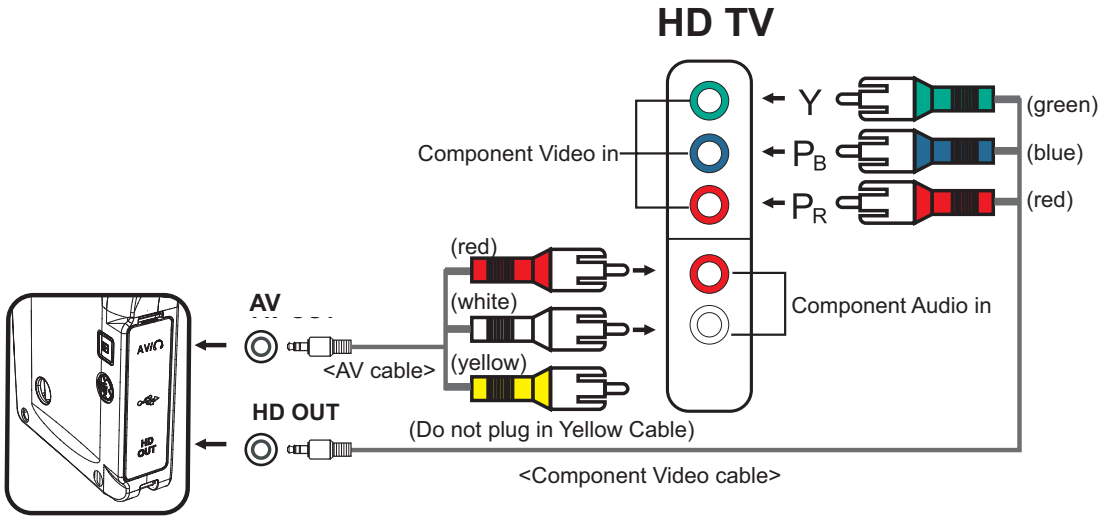

1. Turn on your HD TV.
2. Turn on the Camcorder.
3. Plug one end of the component video cable into the (Component Video IN) port on the HDTV and the other end into the (HD OUT) port on Camcorder.
4. Plug one end of the other AV cable into the (Component Audio IN) port on the HDTV and the other end into the (AV) port on Camcorder. (Please do not plug in the yellow connector to HDTV's AV-IN.)
5. Press the input switch mode on HD TV and select "Component Input".

If you record an HD resolution clip while connected to your HD TV, the TV display video resolution will down size to D1 (480P) resolution due to data bit rate, but the recorded file will remain HD with no change.

Connecting the camcorder to Standard TV

TV = Traditional CRT TV

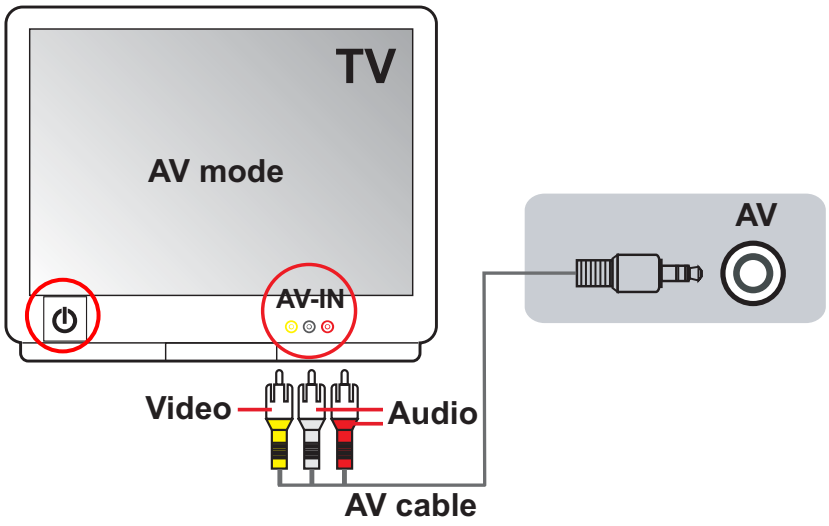

1. Power on your TV and switch the TV to AV mode.
2. Connect the audio and video ends of the AV cable (yellow/white/red color) to the TV “AV-IN” jacks.
3. Power on the camcorder.
4. Connect the other end of the AV cable to the “AV” port on your camcorder. When the pop-up message appears on the screen, please select “AV-Out”.

Advanced Operations

Menu operation

The menu items provide several options for you to fine-tune your camera functions. The following table gives details on menu operations.

How to...	Action
Bring up the menu	Press the **MENU** button.
Move the highlight bar	Use the **Joystick** to move up or down.
Enter sub-menu/Confirm an item	Press the **OK** key.
Exit menu/Go back to upper menu	Press the **MENU** button (when in sub-menu).

Menu items in Camera mode

Power-on → Press the **Menu** button.

Item	Option	Description
Video Resolution	HD 1080P(30f)	Set the video resolution to HD 1080P (1440x1080 pixels).
	HD 60f(720P)	Set the video resolution to HD 60f (1280x720 pixels).
	HD 30f(720P)	Set the video resolution to HD 30f (1280x720 pixels).
	WVGA 60f(DVD)	Set the video resolution to WVGA 60f (848x480 pixels).
	QVGA 30f(WEB)	Set the video resolution to QVGA30f (320x240 pixels).
Picture Resolution	3M	Set picture resolution to 3 mega pixels.
	5M	Set picture resolution to 5 mega pixels.
	8M	Set picture resolution to 8 mega pixels.
Flash Strobe	On	The flash is forced to fire in every shot.
	Auto	The flash automatically fires when the lighting is insufficient.
	Off	The flash is disabled.
NightShot	On/Off	Enabling this setting allows you to take a photograph with a dark background. Since the shutter speed will slow down when taking photographs at a dark place, we recommend using a tripod to eliminate blurring from hand shake. **Warning: Noise increases when NightShot is enabled.**
EV	-2~+2	Enabling this setting allows you to take a photograph with a dark background. Since the shutter speed will slow down when taking photographs at a dark place, we recommend using a tripod to eliminate blurring from hand shake. **Warning: Noise increases when NightShot is enabled.**
Selftimer	On/Off	Enable/Disable the selftimer. After the selftimer is turned on, the camera will have ten seconds delay before recording when the Shutter button is pressed.

Menu items in Camera mode (continued)

Item	Option	Description
Continuous Shot	Off	Disable Multi-shot function.
	3	The camera takes 3 photos per time.
	5	The camera takes 5 photos per time.
White Balance	Auto	The camera automatically adjusts white balance.
	Sunny	This setting is suitable for outdoor recording in sunny weather.
	Cloudy	This setting is suitable for recording in cloudy weather or shady environments.
	Fluorescent	This setting is suitable for indoor recording with fluorescent lamp lighting, or environments with high color temperature.
	Tungsten	This setting is suitable for indoor recording with incandescent lamp lighting, or environments with low color temperature.
Effect	Normal	Make recordings in natural color.
	Black & White	Make recordings in black and white.
	Classic	Make recordings in sepia-toned color.
AF Lock	On/Off	Enable/Disable auto focus function.
Stabilizer	On/Off	Enable/Disable stabilizer function. Stabilizer function can prevent the image from blurring causing by hand shake.

Menu items in Playback mode

Power-on → Press the **MODE** button → Use the Joystick to switch to **My Works** mode → Select **Video, Picture** or **Voice** folder→ Press the **OK** button → Press the **MENU** button.

Item	Option	Description
Delete One	Yes/No	Delete current file.
Delete All	Yes/No	Delete all pictures and video/audio files stored in the memory.
Lock	Yes/No	Single, multiple, or all files can be locked. A locked file cannot be erased by a delete function. While the formatting function will erase all locked/unlocked files.
Repeat All	All	The camera displays images/video clips in sequence. You can press the OK key to stop the slide show/video play.

* If there are no files in the camera, no items will be seen.

Menu items in Setting mode

Power-on → Press the **MODE** button → Select the **Setting** ( ) mode → Press the **OK** button.

Item	Option	Description
Clock	-	Set date and time.
Language	-	Let you select the language used for OSD.
Beep	Off	Disable beep sound.
	On	Enable beep sound.
	Shutter On	Disable beep sound, but keep Shutter sound.
Start Movie	On/Off	Enable/Disable start movie function.
Icon	On/Off	Enable/Disable OSD icons to display on the screen.
LCD Brightness	-2~+2	Set LCD brightness. A positive value makes the LCD brighter; while a negative value makes the LCD dimmer.
TV System	NTSC	Set TV system compatibility to NTSC. This option is suitable for America, Taiwan, Japan, and Korea areas.
	PAL	Set TV system compatibility to PAL. This option is suitable for Germany, England, Italy, Netherlands, China, Japan, and Hong Kong.
Flicker	50Hz	Set flicker frequency to 50Hz*.
	60Hz	Set flicker frequency to 60Hz*.
Auto Off	Off	Disable Auto-off function.
	1 min	The camera automatically shuts down when staying inactive for over 1 minute.
	3 min	The camera automatically shuts down when staying inactive for over 3 minutes.
	5 min	The camera automatically shuts down when staying inactive for over 5 minutes.
Format	Yes	Format the storage medium. Note that all files stored in the medium will be gone.
	No	Cancel action.
Default	On	Restore factory defaults. Note that your current settings will be overridden.
	Off	Cancel action.

Menu items in Setting mode (continued)

* Flicker settings table:

Region	England	Germany	France	Italy	Spain	Netherlands	Russia
Setting	50Hz	50Hz	50Hz	50Hz	50Hz	50Hz	50Hz
Region	Portugal	America	Taiwan	China	Japan	Korea	Thailand
Setting	50Hz	60Hz	60Hz	50Hz	50/60Hz	60Hz	50Hz

Battery Life Indicator

Icon	Description
	Full battery life
	Moderate battery life
	Low battery life * The flash strobe and the LED lights will be disabled.”
	Empty battery life

Note: To avoid sudden outage of power supply, you are recommended to replace the battery when the icon indicates low battery life.

Battery Life

Still picture	**Video clip**
Number of shots	Recording time (minute)
110	60
* shoot every 30 seconds ** flash is off *** resolution is set to 5M (2592x1944)	* resolution is set to 720P 60f (1080x720 @60f)

Note: This table is for your reference only. The actual battery life depends on your battery type and recharge level.

Storage Capacity

Memory	Video (min.)			Still picture		
	HD 1080P 30f HD 60f	HD 30f WVGA 60f	QVGA 30f	8M	5M	3M
SD card (256MB)	3	7	40	95	145	230
SD card (512MB)	7	15	80	190	290	460
SD card (1GB)	15	30	160	380	580	920
SD card (2GB)	30	60	320	770	1160	1840
SD card (4GB)	60	120	640	1540	2320	3680

Note: The actual value of capacity may vary (up to ± 30%) depending on the color saturation and complexity of your subject and surroundings.

System Requirements

QuickTime

System requirements are different in different video resolution settings:

Video Resolution	PC system requirements
HD 1080P (1440x1080) @30fps	OS = Windows XP SP2, Vista or above CPU = Pentium 4 3.2GHz Core 2 Dual or above System RAM = 1GB (2GB recommended) Display card = 256MB of RAM
HD 60f (1280x720) @60fps	
HD 30f (1280x720) @30fps	OS = Windows XP SP2, Vista or above CPU = Pentium 4 3.2GHz or above System RAM = 512MB (1GB recommended) Display card = 256MB of RAM
WVGA 60f (848x480) @60fps	
QVGA 30f (320x240) @30fps	OS = Windows XP, Vista or above CPU = Pentium 4 1.5GHz or above System RAM = 256MB (512MB or above recommended) Display card = 64MB (128MB or above recommended)

Specifications

Item	Description
Model	5 Mega-pixel camera
Image sensor	5 Mega (2592x1944 pixels)
Resolution	Still image: 3M(2048x1536); 5M(2592x1944); 8M(3200x2400) 1440x1080 (HD 1080P) 1280x720 (HD 60f) 1280x720 (HD 30f) 848x480 (WVGA 60f) 320x240 (QVGA30f)
Lens	Optical zoom lens
Digital zoom	4X (2X in 1080P mode)
File format	MOV, JPEG, WAV
Video frame rate	1440x1080, up to 30fps (HD 1080P) 1280x720, up to 60fps (HD 60f) 1280x720, up to 30fps (HD 30f) 848x480, up to 60fps (WVGA 60f) 320x240, up to 30fps (QVGA 30f)
Internal memory	Yes
External memory	SD/MMC card (up to 32GB SDHC)
LCD display	3” LCD
TV out	HDTV Component out, NTSC/PAL system supported
Interface	USB 2.0
Voice recorder	Yes
Microphone	internal (stereo); external mic jack
Speaker	Yes
Nightshot	Yes (both in still image and video modes)
Battery	NP60 compatible Li-ion rechargeable battery

Note: Specifications are subject to change without notification.